

DIAcontrol by BS 2021

To open, unscrew the three screws at the bottom.

When opening beware of the twisted cable connection from microcontroller board of the bottom part going to the relays board of the top part! Do not disconnect!

USB midi to mini jack phono jack adapter

midi inputs:
XLR
phono jack
mini jack

relay board

midi in and microcontroller board

USB port is only for programming purpose!

LED display board

PSU board

relay board driver transistors

